



AUTO BREEZE COTTON CANDY

This unit draws a lot of power. Use only a short, heavy-duty extension cord or no extension cord at all. Do NOT run any other appliances from the same outlet.

Operating Instructions:

1. With the Candy Switch OFF, turn the Power Switch ON. The spinner head WILL NOT start to rotate.
2. With the spinner head stopped, pour flosssugar into the spinner head. Always fill it 90% full with sugar. This 90% level is necessary to obtain a blanced condition in the floss head. DO NOT OVERFILL!

IMPORTANT: NEVER ADD SUGAR WHEN MOTOR IS RUNNING.

3. Turn the Candy Switch ON. The spinner head will rotate and heat. After about 30 seconds the machine will start to make cotton candy.
4. When the spinner head needs to be refilled with sugar, or to stop making cotton candy, turn the Candy Switch OFF. The cooling cycle will start. After 1 minute the cooling cycle completes, and the spinner head will stop rotating. When the spinner head is stopped, refill with flosssugar. Turn the Candy Switch ON, and continue to make cotton candy.

Note: During the cooling cycle the spinner head will remain spinning. Cooling is necessary to keep carbon from forming in the spinner head. DO NOT use the Power Switch for normal operation of the machine. This will bypass the cooling cycle.

Important: Failue to cool down the floss head could result in leaving melted sugar in the floss head. If the motor is restarted, this melted sugar will exit the floss head and could cause burns. In addition, sugar left in the floss head may smoke or cause carbon build up.

Immediate Power Off: To bypass the cooling cycle and immediately remove power from the machine, turn the Power Switch OFF.

Cleaning Instructions:

Rinse the sugar off the large collecting bowl. Don't try to clean the machine itself as Taylor Rental will take care of that. *If you have any questions or problems, please call us at 201-847-9611.*

Thank you for renting from Taylor Rental. Have a great party!

