

Warehouse: 201-847-9611, 201-848-8326
Hillsdale (201) 664-0900
Ridgewood (201) 447-0360

TEMP DIAL COOK CLOCK TIMESET



Convection Ovens

Operating Instructions:

Plug directly into an electric outlet without using ANY extension cords.

The clock should be lit up and appear as "00." If it doesn't, the oven isn't plugged in.

Turn the temperature dial to the desired setting.

Press the COOK button (to the right of the temperature dial, to the left of the clock).

Press the up arrow for the timer. The clock shows minutes and hours

(01:01 = one hour and one minute).

Once the timer has been set to any amount of time the oven will automatically turn on.

You will be able to hear a quiet fan sound from the fan on the top of the oven.

AVOID PROBLEMS: Convection ovens use a lot of electricity(1500 watts)!

* Don't use extension cords.

* Don't run other appliances from the same outlet.

* If the oven doesn't get hot enough, the oven is not getting enough electricity. Plug the oven directly into the outlet, without any extension cord. Make sure nothing else is drawing power from the same circuit.

Turn off unnecessary lights and appliances running *anywhere* in the same building.

Cleaning instructions:

Remove all food from anywhere in or on the oven. Taylor Rental will do the rest.

If you have any questions or problems, please call immediately.

Thank you for renting from Taylor Rental Have a great party!