


TAYLOR RENTAL®

Warehouse: 201-847-9611, 201-848-8326
Hillsdale (201) 664-0900
Ridgewood (201) 447-0360

Popcorn Popper

**This unit draws 10 amps of power.
Use only a short #12-gauge extension cord,
or no extension cord at all.
Don't run any other appliances
from the same outlet.**

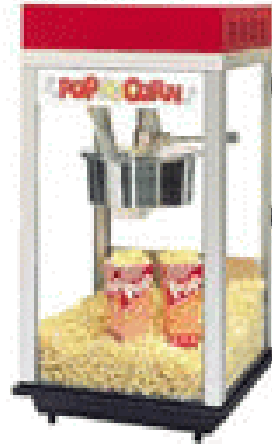

Operating Instructions

1. There are three switches: warming lamp, kettle motor and kettle heat.
Turn all three switches ON.
2. The stirrer inside the kettle should be turning. The stirrer is driven by a gear sticking out of the ceiling of the popper. Check to make sure that this gear is engaged with the gear sticking up from the kettle.
3. For the first batch: Put all the oil from the oil-side of the two-part packet into the kettle, along with three or four popcorn kernels. After all of these test kernels pop, add the rest of the popcorn from the packet.
Use the handle on the kettle to turn the kettle over and dump out popcorn.
4. Continue to pop corn one packet at a time.
When popping is completed, turn the kettle switches OFF.

Cleaning instructions

Unplug the machine. After everything has cooled down, clear out all the leftover popcorn and use paper towels to wipe out the kettle.

If you have any questions or problems, please call immediately.

Thank you for renting from Taylor Rental Have a great party!