

Warehouse 201-848-8326
Sales Office 201-847-9611
Hillsdale 201-664-0900
Ridgewood 201-447-0360



Cotton Candy

This unit draws a lot of power. Use only a short, heavy-duty extension cord, or no extension cord at all. Don't run any other appliances from the same outlet.

Operating Instructions

1. Turn the heat switch on, and rotate the dial all the way clockwise. Wait 15 seconds for the machine to heat up.
2. Fill the floss head (at the top, center of the machine) most of the way with floss sugar. Don't overfill it, just fill it most of the way.
Never add sugar when the motor is running.
3. Turn on the main switch. The head will start spinning, and the machine should start spinning out webs of floss in a few seconds.
4. If the machine starts to smoke, turn the dial counterclockwise to reduce the heat. You should then be able to leave the dial at this position.
5. When you're done, turn off all the switches.

Cleaning instructions

Rinse the sugar off the large collecting bowl. Don't try to clean the machine itself Taylor Rental will take care of that.

If you have any questions or problems, please call immediately.

Thank you for renting from Taylor Rental Have a great party!